

## Janam XP Series - Screenshots

Capture screenshot images from your Janam XP20 or XP30

You can quickly and easily take a screen capture on your Janam XP20 or XP30. Janam's XP Series seamlessly integrates with *JollyRoger*, a freeware utility application available for download on the web. You will find this capability particularly helpful in creating user guides, how-to documents and marketing material.

### MINIMUM REQUIREMENTS:

- Janam XP20 or XP30 (All Configurations)
- *JollyRoger* Paragon Software (SHDD) Application

### BEFORE YOU BEGIN:

*JollyRoger* is available for download at: <http://palm-software.penreader.com/JollyRoger.html>. This utility is not a commercial product. It is distributed as freeware. Please keep in mind that developers do not guarantee the compatibility with all other third-party software and hacks designed for Palm OS platform. For questions about using this program, please contact the customer support service: [palm\\_support@penreader.com](mailto:palm_support@penreader.com).



### SETUP PROCEDURE:

**1**

- (A) To start, download the *JollyRoger* application and load onto your XP device.
- (B) To start the software, tap the screenshot icon on the Applications screen.
- (C) To activate/deactivate the software, click on the "Activate Checkbox."

**2**

- (A) Make sure a Memory Storage Card (Mini Secure Digital) is inserted before taking pictures.
- (B) To take a picture, press the "Date Book" hardware button (F1).
- (C) The picture will be saved on the Storage Card in the "\Palm\JollyRoger2" folder as the usual Windows BMP file. Thus, no conversion is necessary to use the BMP file.

**3**

- (A) To get the picture from the Memory Storage Card, put the card into a Card Reader (special hardware device from a local office supply retailer).
- (B) Copy the BMP file to your desktop computer.